

Installation Instructions for SRW-S1 to G27 Adapter


1. Remove the 6 hex bolts to detach the wheel.
(4mm hex wrench included)




2. Carefully pull the wheel away just far enough to expose the circuit board.

3. Remove the two electrical connectors and set wheel aside.


4. Remove LED bezel and two screws attaching the circuit board.

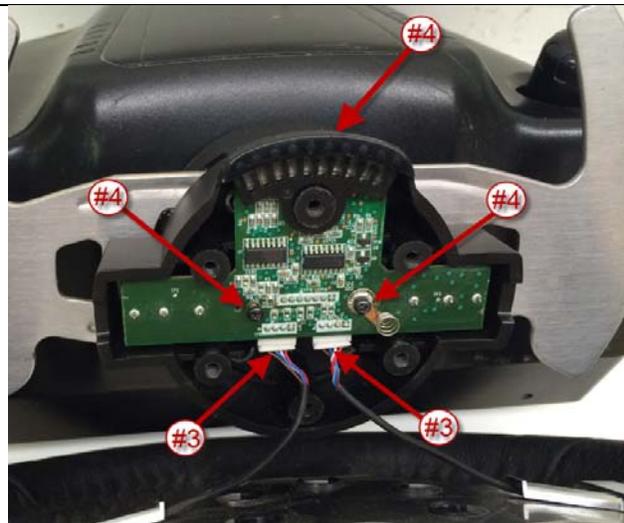

5. Carefully remove the connector from the circuit board.

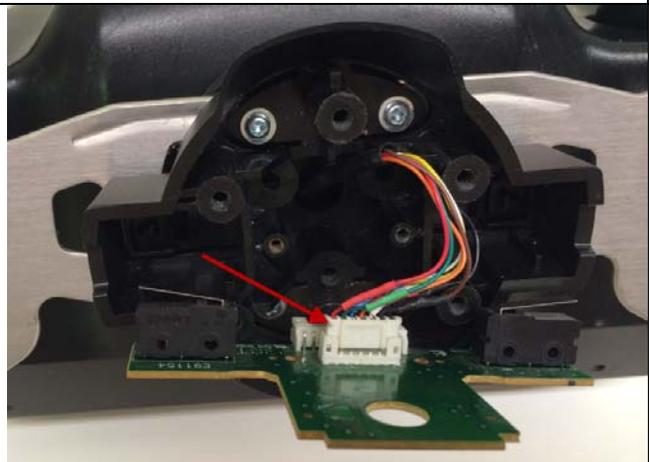

6. Remove three screws attaching the paddle shift housing .

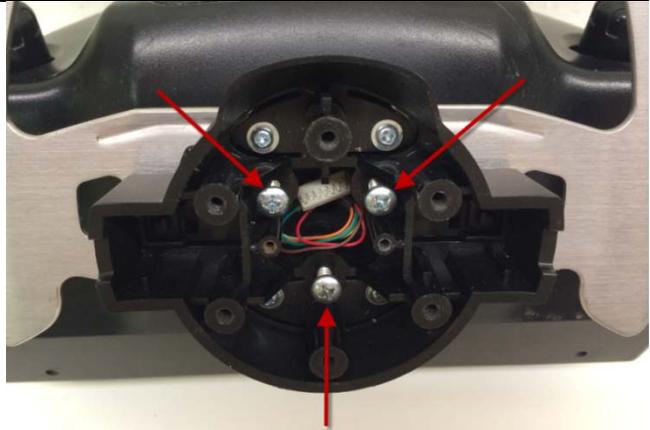

7. Pull the paddle shift housing straight back to remove it from the base.


8. Carefully pull the electrical connector out of the back of the paddle shift housing.

9. Curl the electrical connector and wire up inside the housing shaft.




10. Install the adapter base puck by aligning the notches on the puck with the tabs on the base shaft. Then press the puck on to the base shaft.

Base Puck

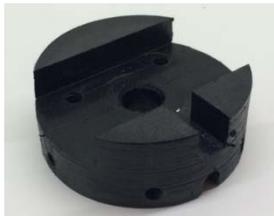


11. Install the three #10 x 1 ½" (38mm) self-taping screws ensuring the base puck tightens down flat onto the base shaft.

#10 x 1 ½" (38mm) self-taping screws

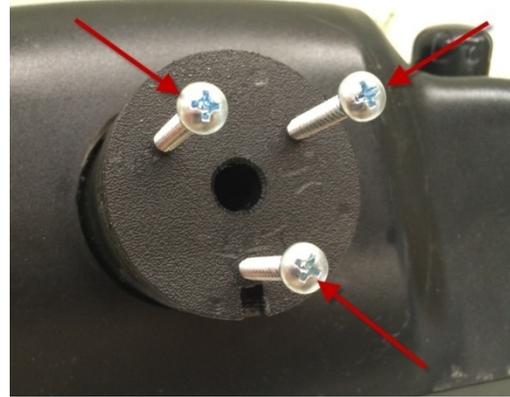


12. Extract the seven (7) stock SRW-S1 screws.

Note: These are the only screws holding the SRW-S1 faceplate to its paddle base. If you allow the two to separate, buttons will escape.

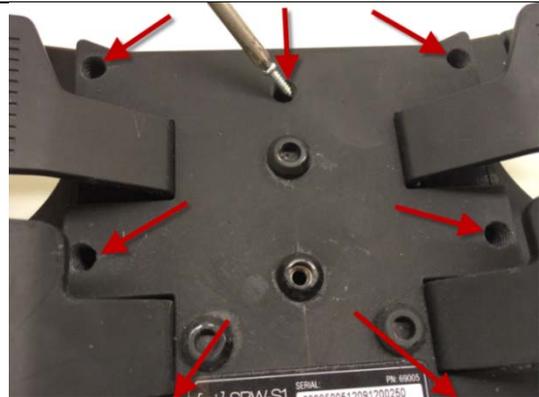


13. Install the adapter plate assembly as shown.
14. Install the seven (7) 2.2mm x 25mm stainless self-taping screws.
15. Use the provided cable ties to attach the SRW-S1 USB cable to the adapter's can as shown. (shown in yellow)

2.2mm x 25mm stainless self-taping screws

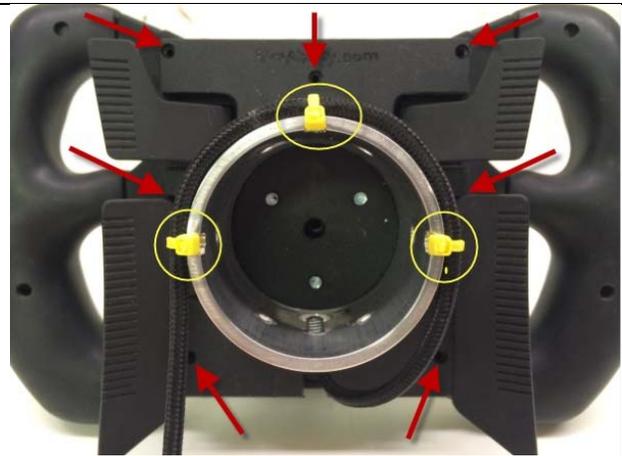

16. Slide the adapter assembly over the adapter puck being sure to align the keys.

Note: Once the adapter is lined up correctly, you will be able to see the threaded holes in base puck through the holes in the adapter. You can rock the adapter from side to side just slightly to help reposition and align the adapter if needed.

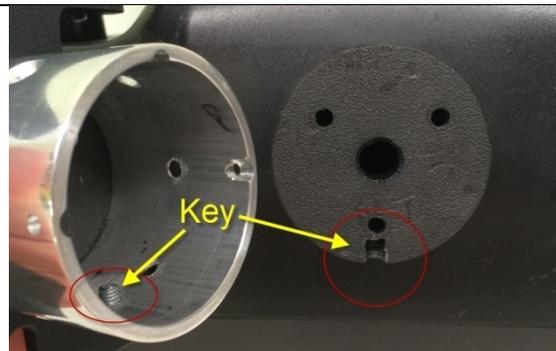

17. Install the six (6) #8 x 1/2" (12.7mm) flat-head hex screws through the adapter and into the base puck. (3/32" hex wrench included)

Caution: The screws just need to be snug. Do not over tighten.

#8 x 1/2" (12.7mm) flat-head hex screws



Thanks for choosing SimAbility. Please contact me if you have any questions, issues, or suggestions. I'd like to hear from you.

Glenn Sidman
www.SimAbility.com
simability@outlook.com