




Installation Instructions for SRW-S1 to Thrustmaster T300/TX Adapter

1. Remove the three (3) hex head screws that hold the threaded adapter to the stock Thrustmaster wheel rim and remove the threaded adapter from the stock wheel rim.

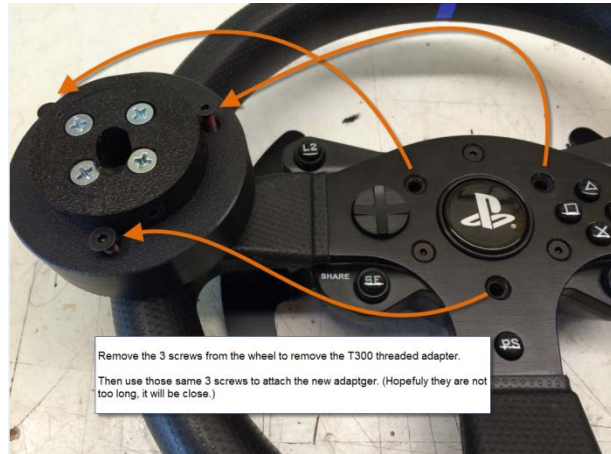


2. Install the threaded adapter onto the SimAbility adapter using the three (3) hex screws you removed in step 1.

Align the bottom key of the adapter puck (shown below) with the bottom pin on the wheel base adapter (shown on the right)

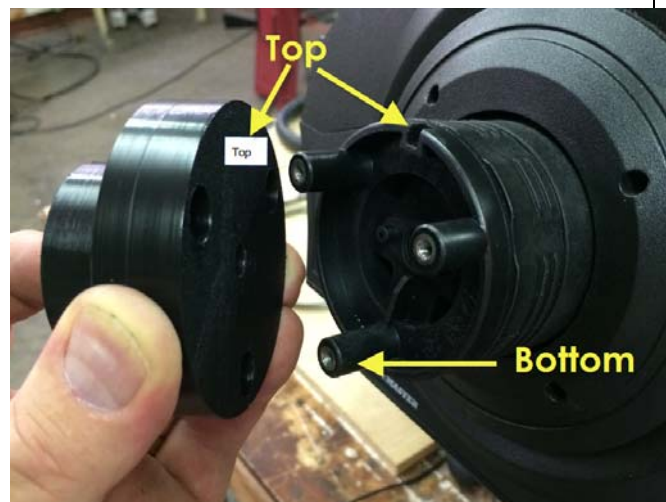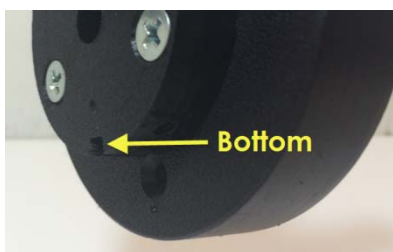

3. Extract the seven (7) stock SRW-S1 screws.


Note: These are the only screws holding the SRW-S1 faceplate to its paddle base. If you allow the two to separate, buttons will escape.

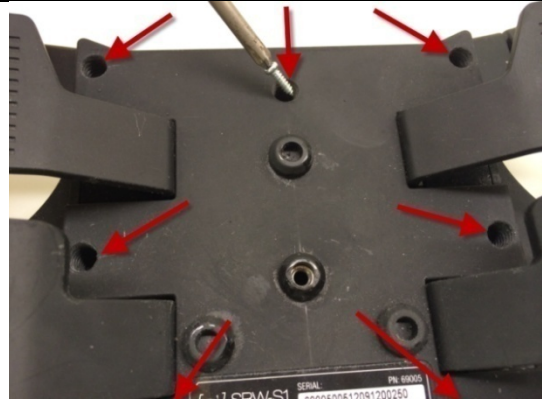

4. Install the adapter plate assembly as shown.


5. Install the seven (7) 2.2mm x 25mm stainless self-taping screws.

2.2mm x 25mm stainless self-taping screws

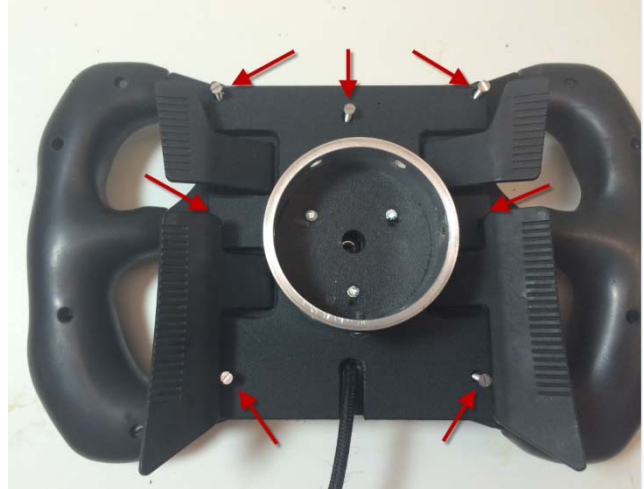

6. Slide the adapter assembly over the adapter puck being sure to align the keys.

Note: Once the adapter is lined up correctly, you will be able to see the threaded holes in base puck through the holes in the adapter. You can rock the adapter from side to side just slightly to help reposition and align the adapter if needed.

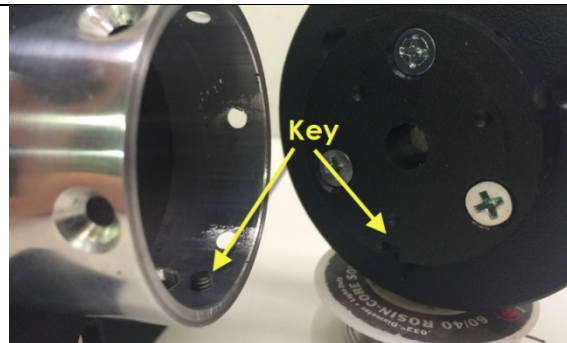

7. Install the six (6) #8 x 1/2" (12.7mm) flat-head hex screws through the adapter and into the base puck. (3/32" hex wrench included)

Caution: The screws just need to be snug. Do not over tighten.

#8 x 1/2" (12.7mm) flat-head hex screws



Thanks for choosing SimAbility. Please contact me if you have any questions, issues, or suggestions.

Glenn Sidman

www.SimAbility.com

simability@outlook.com